



DUNCAN AVIATION ONTIC AUTHORIZED MRO CAPABILITIES LIST



PART NUMBER	DESCRIPTION
063-01007-0000	HF XCVR ASSY
063-01007-0001	HF XCVR W/CW
064-01009-0000	XCVR VHF COMM
064-01009-0001	XCVR VHF COMM
064-01009-0002	XCVR VHF COMM
064-01009-0003	XCVR VHF COMM
064-01015-0000	XCVR HF/SSB RMT
064-01015-0001	RCVR/EXCTR W/SEL
064-01015-0010	RX/EX W/SP PROC
064-01015-0011	RX/EX W/S P AND SCL
064-01015-0040	RX/EX MOD BW
064-01015-0041	RX/EX MOD BW SCL
064-01015-0051	RX/EX W/WBW DTANDSC
064-01015-0053	RX/EX W/SBW DTANDSC
064-01015-0061	FINAL ASSY
064-01016-0000	HF CONT 28V BLK
064-01016-0001	HF CONT 5V BLK
064-01016-0002	HF CONT 28V GRY
064-01016-0003	HF CONT 5V GRY
064-01016-0004	HF CONT 28V RB
064-01016-0005	HF CONT 115V NVG B
064-01016-0010	HF CTL 28V BK 23M
064-01016-0011	HF CTL 5V BK 23M
064-01016-0012	HF CTL 28V GY 23M
064-01016-0013	HF CTL 5V GY 23M
064-01016-0014	HF CTL 28V RB 23M
064-01017-0000	XCVR RMT AUTO CPLR
064-01017-0001	PWR AMP/ANT CPLR
064-01017-0002	XCVR RMI CPLR
064-01017-0010	FINAL ASSY
064-01017-0011	FINAL ASSY
064-01017-0012	FINAL ASSY
064-01023-0000	FINAL ASSY 25K SEL
064-01023-0001	FINAL ASSY 50K SEL
064-01023-0002	FINAL ASSY 25K BB
064-01023-0003	FINAL ASSY 50K BB
064-01023-0004	25K SEL W/SELCAL
064-01023-0005	50K SEL W/SELCAL
064-01023-0006	25K BB W/SELCAL
064-01023-0007	50K BB W/SELCAL
064-01023-0008	FINAL ASSY 25K SEL
064-01023-0009	FINAL ASSY 50K SEL
064-01023-0010	FINAL ASSY 25K JB
064-01023-0011	FINAL ASSY 50K BB

PART NUMBER	DESCRIPTION
064-01023-0012	FINAL ASSY 10W
064-01023-0013	FINAL ASSY 10W
064-01023-0014	FINAL ASSY 10W
064-01023-0015	FINAL ASSY 10W
064-01029-0000	28V HF COUPLER
064-01034-0000	FINAL ASSY KA 579A
064-01034-0001	FINAL ASSY
064-01065-0100	FINAL KTR909
064-01066-0101	FINAL KTR909A
064-01071-0101	KCU1051 FINAL ASSY
064-01071-0201	FINAL ASSEMBLY KCU1051
064-01071-0301	FINAL ASSEMBLY KCU 1051
064-01076-0101	KTR 909B FINAL ASSEMBLY
066-01041-0000	TRANSPONDER
066-01044-0000	KMR675 MARKER BEACON RECEIVER
066-01044-0001	KMR675 BCN RCVR W/O TONE TEST
066-01066-0000	KDM0706A REMOTE DME -85DBM
066-01066-0001	KDM0706A REMOTE DME -90DBM
066-01066-0002	KDM0706A REMOTE DME -85DBM
066-01066-0011	KDM0706A REMOTE DME -90DBM
066-01066-0020	KDM0706A REM AGL DME-90DBM
066-01066-0021	KDM0706A REM AGL DME-85DBM
066-01066-0022	KDM0706A REM DME 660 SYS
066-01066-0023	KDM0706A REM DME TRACK FLG
066-01066-0024	KDM0706A REM DME TRK FLG
066-01066-0025	KDM0706A DME W/AGL
066-01066-0031	KDM0706A REM DME AERMACCHI
066-01066-0035	REM DME KNS81 COMP
066-01069-0002	KDI 573 SLV W/1H2
066-01069-0003	KDI 573 SLV W/O1H2
066-01069-0004	KDI 574 INDICATOR
066-01069-0005	KDI 574 W/O 1H2
066-01069-0014	KDI 574 GRY INDCTR
066-01071-0000	R/T TRANSPONDER
066-01073-0002	RCVR TRANS TACAN
066-01073-0003	RCVR TRANS TACAN
066-01074-0000	TACAN UNIT
066-01074-0001	TACAN UNIT
066-01074-0002	TACAN UNIT
066-01077-0000	ADF RECEIVER ASSY
066-01077-0001	ADF RECEIVER ASSY
066-01078-0000	NAV RCVR GS MB RMI
066-01078-0001	NAV RCVR GS RMI
066-01078-0002	NAV RCVR MB RMI

PART NUMBER	DESCRIPTION
066-01078-0003	NAV RCVR RMI
066-01078-0004	NAV RCVR GS MB
066-01078-0005	NAV RCVR GS
066-01078-0006	NAV RCVR MKR BCN
066-01078-0007	NAV RCVR CONV
066-01078-0008	NAV RECEIVER
066-01078-0010	NAV RCVR GS MB RMI
066-01078-0011	NAV RCVR GS RMI
066-01078-0012	NAV RCVR MB RMI
066-01078-0013	NAV RCVR RMI
066-01078-0014	NAV RCVR GS MB
066-01078-0015	NAV RCVR GS
066-01078-0016	NAV RCVR MKR BCN
066-01078-0017	NAV RCVR
066-01091-0000	NAV DISTANCE IND
066-01091-0001	NAV DIST IND/GRY
066-01091-0002	NAV DIS IND NVG
066-01091-0004	NAV DIST BNDX
066-01091-0006	NAV DIST NVGSL
066-01124-0000	KLN 670 FL ASSY
066-01126-0000	NAV RCVR KNR 620
066-01152-0101	KTA 810 FINAL ASSEMBLY
066-01175-0101	KMH 820 WO / GPS
066-01175-0102	KMH 820 W/O GPS
066-01175-2101	KMH 820 W/ GPS
066-01175-2102	KMH 820 W/ GPS
066-01175-2201	KMH 820 W/ GPS
066-01177-0101	KTA 910 FINAL ASSEMBLY
066-01178-0101	KMH 920 WO / GPS
066-01178-0102	KMH 920 W/O GPS
066-01178-2101	KMH 920 W / GPS
066-01178-2102	KMH 920 W/ GPS
066-03022-0007	VNAV COMPUTER
066-03031-0000	RADAR ALTIMETER
066-03031-0001	RADAR ALTIMETER
066-03031-0002	RADAR ALTIMETER
066-03031-0003	RADAR ALTIMETER
066-03031-0004	RAD ALT 28VB NVG
066-03042-0000	RMI INDICATOR
066-03042-0001	RMI INDICATOR
066-03042-0003	RMI INDICATOR
066-03044-0000	INDICATOR
066-03044-0001	INDICATOR
066-03044-0002	INDICATOR

PART NUMBER	DESCRIPTION
066-03044-0004	KNI416 28V BLK NVG
066-03060-0000	RADIO MAGNETIC IND
066-03060-0001	RADIO MAGNETIC IND
066-03060-0002	RADIO MAGNETIC IND
066-03060-0003	RADIO MAGNETIC IND
066-03060-0004	KNI 582 TACAN RMI
066-03060-0005	RADIO MAGNETIC IND
066-03060-0006	KNI582 28VB NVG
066-03085-0000	RDR IND BK IN842A
066-03085-0001	RDR IND GY 1N842A
066-03085-0010	IN842A BLACK W/VP
066-03085-0011	IN842A GRAY W/VP
066-03085-0030	IN842A BLK W/EVP
066-03085-0031	IN842A GRY W/EVP
066-03086-0000	RDR IND BK IN862A
066-03086-0001	RDR IND GY IN862A
066-03086-0030	IN862A BLK W/EVP
066-03086-0031	IN862A GRY W/EVP
066-03114-0000	RDS81 IND BK
066-03114-0001	RDS81 IND GR
066-03115-0000	RDS IN862B BAE
066-04010-0019	NAV SYS10WPSPL LTG
066-04010-0020	NAV SYS10WP GY
066-04010-0021	NAV SYS10WP GY
066-04010-0038	NAV SYS TAC BY
066-04010-0039	NAV SYS TAC GY BUS
066-04010-0040	NAV SYS TACRF1 SHD
066-04010-0062	RNAV W/62 OPTIONS
066-04010-0082	RNAV W/82 OPTIONS
066-04010-0093	BLACK
066-04011-0000	KNC667 RNV
066-04011-0001	KNC667 RNV/OMG
066-04011-0002	667 RNV/D42/V32
066-04011-0003	667RNV/OMG/D42/V32
066-04011-0004	KNC667 RNV/E10
066-04011-0005	KNC667 RNV/OMG/E10
066-04011-0006	667 RNV/V41/D44
066-04011-0007	667RNV/V41/D44/OMG
066-04011-0008	KNC 667
066-04011-0009	KNC 667
066-04011-0010	KNC667 RNV/E85
066-04011-0011	KNC667 RNV/OMG/E85
066-04011-0012	667RNV/E10/V41/D44
066-04011-0013	6670MG/E10/V41/D44

PART NUMBER	DESCRIPTION
066-04011-0016	KNC667 E85/D42/V32
066-04011-0017	667OMG/E85/D42/V32
066-04011-0018	667/D42/V32/565TAS
066-04011-0019	6670MG/D42/V32/565
066-04011-0020	KNC667 RNV/C12
066-04011-0021	KNC667 RNV/OMG/C12
066-04011-0022	KNC667 RNV/565TAS
066-04011-0023	KNC667 OMG/565TAS
066-04011-0024	KNC667 429GAMA UXX
066-04011-0025	KNC667 429GAMA W/O
066-04011-0026	KNC667/RNAV/ANG
066-04011-0027	KNC667/ANG/OMG
066-04011-0028	KNC667/ANG/GPS
066-04011-0029	KNC667 UXX INT GPS
066-04011-0030	KNC 667 RNV/ONI
066-04011-0031	KNC 667RNV/OMG/ONI
066-04011-0032	KNC 667
066-04011-0033	KNC 667
066-04011-0034	KNC 667
066-04011-0035	KNC 667
066-04011-0036	667RNV/V41/D44/ONI
066-04011-0037	667 ONG/V41/D44/ON
066-04011-0038	KNC 667
066-04011-0039	KNC 667
066-04011-0040	KNC 667
066-04011-0041	KNC 667
066-04011-0042	667E10/V41/D44/ONI
066-04011-0043	ONI IMG/E10/V41/D4
066-04011-0044	KNC 667
066-04011-0045	KNC667
066-04011-0046	KNC 667
066-04011-0047	KNC 667
066-04011-0048	KNC667 G10GPS
066-04011-0049	KNC667 G10GPS
066-04011-0050	KNC667 G10GPS -50
066-04011-0051	KNC667 HICSGPS -51
066-04011-0052	KNC667 HISGPS
066-04011-0053	KNC0667 GCOLGPS
066-04012-0000	CDU GRY 28V
066-04012-0001	CDU BLK 28V
066-04012-0002	CDU GRY 5V
066-04012-0003	CDU BLK 5V
066-04012-0010	CDU BRY 28V
066-04012-0011	CDU BLK 28V

PART NUMBER	DESCRIPTION
066-04012-0012	CDU GRY 5V
066-04012-0013	CDU BLK 5V
066-04012-0020	CDU GRY 28V SAS
066-04012-0021	CDU BLK 28V SAS
066-04012-0022	CDU GRY 5V SAS
066-04012-0023	CDU BLK 5V SAS
066-04012-0030	CDU GRY 28V NO FRQ
066-04012-0031	CDU BLK 28V NO FRQ
066-04012-0032	CDU GRY 5V NO FRQ
066-04012-0033	CDU BLK 5V O FRQ
066-04012-0052	CDU GRY 5V
066-04012-0070	CDU GRY 5V GULL
066-04013-0000	CDU GRY 28V
066-04013-0001	CDU BLK 28V
066-04013-0002	CDU GRY 5V
066-04013-0003	CDU BLK 5V
066-04013-0005	CDU BLK 115V NVG
066-04013-0010	CDU G 28V
066-04013-0011	CDU B 28V
066-04013-0012	CDU G 5V
066-04013-0013	CDU B 5V
066-04013-0020	CDU GRY 28V NO FRQ
066-04013-0021	CDU BLK 28V NO FRQ
066-04013-0022	CDU GRY 5V NO FRQ
066-04013-0023	CDU BLK 5V NO FRQ
066-04013-0030	CDU GRY 28V NO FRQ
066-04013-0031	CDU BLK 28V NO FRQ
066-04013-0032	CDU GRY 5V NO FRQ
066-04013-0033	CDU BLK 5V NO FRQ
066-04013-0052	CDU 5VG
066-04013-0071	CDU GRY 5V
066-04018-0000	KNC667 RNV/DHV
066-04018-0001	KNC667 RNV/OMG/DHV
066-04018-0012	KNC667 DEHAV GPS
066-04019-0000	KNC667 RNV/SAS
066-04019-0001	KNC667 RNV/OMG/SAS
066-04022-0000	RNAV/SWR
066-04022-0001	RNAV/DMG/SWR
066-04022-0002	KNC667 SWISS/ACARS
066-04022-0003	KNC667 SWISS/ACARS
066-04022-0010	KNC667 SWISSGPS
066-04022-0011	KNC667 SWISSGPS
066-04022-0012	KNC667 SWISSGPS
066-04030-0000	KNC667 FOKKER

PART NUMBER	DESCRIPTION
066-04030-0001	KNC667 FOKKER
066-04034-0101	KLN900 GPS LNAV BK
066-04034-0102	KLN900 GPS LNAV BK
066-04034-0104	KLN 900 GPS PMO BK
066-04034-0201	KLN900 GPS LNAV GY
066-04034-0202	KLN900 GPS LNAV GY
066-04034-0204	KLN 900 GPS PMO GR
071-00019-0000	BRIDGING AMPLIFIER
071-00030-0000	DATA LOADER 3.5
071-00030-0001	DATA LOADER 3.5
071-00031-0000	DATA LOADER RMT
071-00031-0010	DATA LOADER RWT
071-00097-0100	CM2000 CONFIG MOD
071-00097-1000	CM67A CONFIG MODUL
071-00112-0100	KCM 805 CONFIGURATION MODULE
071-00112-0200	KCM 805 CONFIGURATION MODULE
071-01034-0000	ADF LOOP ANTENNA
071-01076-0000	FINAL ASSY
071-01192-0008	C BLK 28V DFSD STD
071-01192-0009	C BLK 5V DFSD STD
071-01192-0010	C GRY 28V DFSD STD
071-01192-0011	C GRY 5V DFSD STD
071-01192-0013	C BLK 28V DFSD SEL
071-01192-0014	C BLK 5V DFSD SEL
071-01192-0015	C GRY 28V DFSD SEL
071-01192-0016	C GRY 5V DFSD SEL
071-01192-0018	C BLK 28V STD STD
071-01192-0022	XPNDR CONT GRY 5V
071-01192-0026	XPNDR SEL GRY 5V
071-01210-0004	ADF CONT BLK 28V
071-01210-0005	ADF CONT BLK 5V
071-01210-0006	ADF CONT GRY 28V
071-01210-0007	ADF CONT GRY 5V
071-01210-0008	ADF CONT BLK 5V
071-01210-0009	ADF CONT BLK 28V
071-01210-0010	ADF CONT BLK 14V
071-01210-0012	ADF CONT 28V
071-01210-0017	ADF CONT GRY 5V
071-01215-0024	COMM CONT BLK 5V
071-01215-0025	COMM CONT BLK 28V
071-01215-0026	COMM CONT GRY 5V
071-01215-0027	COMM CONT GRY 28V
071-01215-0029	COMM CONT BLK 5V
071-01215-0030	COMM CONT BLK 28V

PART NUMBER	DESCRIPTION
071-01215-0031	COMM CONT GRY 5V
071-01215-0032	COMM CONT GRY 28V
071-01215-0034	COMM CONT BLK 5V
071-01215-0035	COMM CONT BLK 28V
071-01215-0036	COMM CONT GRY 5V
071-01215-0037	COMM CONT GRY 28V
071-01215-0038	COMM CONT BLK 28V
071-01215-0039	COMM CONT BLK 5V
071-01215-0040	COMM CONT BLK 28V
071-01215-0041	COMM CONT BLK 28V
071-01215-0042	COMM CONT BLK 28V
071-01215-0043	COMM CONT BLK 28V
071-01215-0044	COMM CONT BLK 28V
071-01215-0054	KFS598 CONTROL HD
071-01215-0055	KFS598 CONTROL HD
071-01215-0056	KFS598 CONTROL HD
071-01215-0057	KFS598 CONTROL HD
071-01215-0059	KFS598 CONTROL HD
071-01215-0060	KFS598 CONTROL HD
071-01215-0061	KFS598 CONTROL HD
071-01215-0062	KFS598 CONTROL HD
071-01215-0064	KFS598 CONTROL HD
071-01215-0065	KFS598 CONTROL HD
071-01215-0066	KFS598 CONTROL HD
071-01215-0067	KFS598 CONTROL HD
071-01215-0070	KFS598 CONTROL HD
071-01215-0071	KFS598 CONTROL HD
071-01216-0000	FINAL ASSY
071-01216-0001	FINAL ASSY
071-01216-0002	FINAL ASSY
071-01216-0003	FINAL ASSY
071-01216-0004	FINAL ASSY
071-01216-0005	FINAL ASSY
071-01216-0006	FINAL ASSY
071-01216-0007	FINAL ASSY
071-01216-0008	FINAL ASSY
071-01216-0009	FINAL ASSY
071-01216-0010	FINAL ASSY
071-01216-0011	FINAL ASSY
071-01216-0012	NAV CONT BLK 28V
071-01216-0013	NAV CONT GRY 28V
071-01216-0015	NAV CONT BLK 5V
071-01216-0016	NAV CONT GRY 5V
071-01216-0017	NAV CONT BLK 28V

PART NUMBER	DESCRIPTION
071-01216-0018	NAV CONT GRY 28V
071-01216-0020	NAV CONT BLK 5V
071-01216-0021	NAV CONT GRY 5V
071-01216-0022	NAV CONT BLK 28V
071-01216-0023	NAV CONT GRY 28V
071-01216-0025	NAV CONT BLK 5V
071-01216-0026	NAV CONT GRY 5V
071-01216-0027	NAV CONT BLK 28V
071-01217-0000	FINAL ASSY
071-01217-0001	FINAL ASSY
071-01227-0000	FINAL ASSY
071-01252-0000	HF ANTENNA
071-01252-0001	HF ANTENNA
071-01268-0000	HF BUSS ADAPTER
071-01268-0001	HF BUS ADPTR EXLSB
071-01269-0000	DUAL ANTENNA ADPT
071-01269-0001	DUAL ANTENNA ADPT
071-01269-0002	DUAL ANTENNA ADPT
071-01270-0000	DUAL EXT CAPACITOR
071-01270-0001	DUAL EXT CAPACITOR
071-01270-0002	DUAL EXT CAPACITOR
071-01271-0001	EXTERNAL CAPACITOR
071-01271-0002	EXTERNAL CAPACITOR
071-01274-0000	GC HF CONTROL HEAD
071-01274-0001	GC HF CONTROL HEAD
071-01274-0002	GC HF CONTROL HEAD
071-01274-0003	GC HF CONTROL HEAD
071-01274-0004	GC HF CONTROL HEAD
071-01276-0008	XPDR CTRL BK 28V
071-01276-0009	XPDR CTRL BK 5V
071-01276-0010	XPDR CTRL GY 28V
071-01276-0011	XPDR CTRL GY 5V
071-01276-0013	XPDR CTRL BK 28V
071-01276-0014	XPDR CTRL BK 5V
071-01276-0015	XPDR CTRL GY 28V
071-01276-0016	XPDR CTRL GY 5V
071-01276-0018	XPDR CTRL BK 28V
071-01276-0019	XPDR CTRL BK 28V
071-01276-0020	XPDR CTRL BK 5V
071-01276-0021	XPDR CTRL GY 28V
071-01276-0022	XPDR CTRL GY 5V
071-01276-0023	XPDR CTRL BK 28V
071-01276-0024	XPDR CTRL BK 5V
071-01276-0025	XPDR CTRL BY 28V

PART NUMBER	DESCRIPTION
071-01276-0026	XPDR CTRL GY 5V
071-01276-0027	NVG XPDR CTRL BLK
071-01281-0012	FINAL ASSY TACAN
071-01281-0013	FINAL ASSY TACAN
071-01281-0015	FINAL ASSY TACAN
071-01281-0016	FINAL ASSY TACAN
071-01281-0017	FINAL ASSY TACAN
071-01281-0018	FINAL ASSY TACAN
071-01281-0020	FINAL ASSY TACAN
071-01281-0021	FINAL ASSY TACAN
071-01281-0022	FINAL ASSY TACAN
071-01281-0023	FINAL ASSY TACAN
071-01281-0025	FINAL ASSY TACAN
071-01281-0026	FINAL ASSY TACAN
071-01281-0027	FINAL ASSY TACAN
071-01281-0028	TACAN CTRL BK NVG
071-01282-0024	COMM CTRL BK 5V
071-01282-0025	COMM CTRL BK 28V
071-01282-0026	COMM CTRL GY 5V
071-01282-0027	COMM CTRL GY 28V
071-01282-0029	COMM CTRL BK 5V
071-01282-0030	COMM CTRL BK 28V
071-01282-0031	COMM CTRL GY 5V
071-01282-0032	COMM CTRL GY 28V
071-01282-0034	COMM CTRL BK 5V
071-01282-0035	COMM CTRL BK 28V
071-01282-0036	COMM CTRL GY 5V
071-01282-0037	COMM CTRL GY 28V
071-01282-0038	COMM CTRL BK 28V
071-01282-0039	COMM CTRL BK 5V
071-01282-0040	COMM CTRL BK 28V
071-01282-0041	COMM CTRL BK 28V
071-01282-0042	COMM CTRL BK 28V
071-01282-0043	COMM CTRL BLK 28V
071-01282-0044	COMM CONT BLK 28V
071-01282-0045	COMM CONT GRY 5V
071-01282-0046	COMM CTRL BK NVG
071-01282-0047	COMM CTRL BK NVG
071-01282-0049	COMM CTRL BK NVG
071-01282-0050	COMM CTRL GY NVG
071-01282-0051	COMM CTRL BK NVG
071-01282-0052	COMM CTRL GY NVG
071-01282-0053	COMM CTRL BK NVG
071-01282-0054	COMM CTRL BK NVG

PART NUMBER	DESCRIPTION
071-01282-0055	COMM CTRL BK NVG
071-01282-0056	COMM CTRL GY NVG
071-01282-0064	KFS598A CONTROL
071-01282-0065	KFS598A CONTROL
071-01282-0066	KFS598A CONTROL
071-01282-0067	KFS598A CONTROL
071-01282-0069	KFS598A CONTROL
071-01282-0070	KFS598A CONTROL
071-01282-0071	KFS598A CONTROL
071-01282-0072	KFS598A CONTROL
071-01282-0074	KFS598A CONTROL
071-01282-0075	KFS598A CONTROL
071-01282-0076	KFS598A CONTROL
071-01282-0077	KFS598A CONTROL
071-01282-0080	KFS598A CONTROL
071-01282-0086	COMM 1LYR BK NVG
071-01282-0087	COMM 1LYR BK NVG
071-01282-0088	COMM 1LYR GY NVG
071-01282-0090	COMM 1LYR GY NVG
071-01282-0091	COMM 1LYR BK NVG
071-01282-0092	COMM 1LYR GY NVG
071-01282-0093	COMM 1LYR BK NVG
071-01282-0094	COMM 1LYR BK NVG
071-01282-0095	COMM 1LYR BK NVG
071-01282-0096	COMM 1LYR GY NVG
071-01283-0012	NAV CTRL BK
071-01283-0013	NAV CTRL GY
071-01283-0015	NAV CTRL BK
071-01283-0016	NAV CTRL GY
071-01283-0017	NAV CTRL BK
071-01283-0018	NAV CTRL GY
071-01283-0020	NAV CTRL BK
071-01283-0021	NAV CTRL GY
071-01283-0022	NAV CTRL BK
071-01283-0023	NAV CTRL GY
071-01283-0025	NAV CTRL BK
071-01283-0026	NAV CTRL GY
071-01283-0027	NAV CTRL BK
071-01283-0028	NAV CTRL BK NVG
071-01283-0029	NAV CTRL GY NVG
071-01283-0030	NAV CTRL BK NVG
071-01283-0031	NAV CTRL GY NVG
071-01283-0032	NAV CTRL BK NVG
071-01283-0033	NAV CTRL GY NVG

PART NUMBER	DESCRIPTION
071-01283-0038	NAV 1LYR BK NVG
071-01283-0039	NAV 1LYR GY NVG
071-01283-0040	NAV 1LYR BK NVG
071-01283-0041	NAV 1LYR GY NVG
071-01283-0042	NAV 1LYR BK NVG
071-01283-0043	NAV 1LYR GY NVG
071-01284-0004	ADF CTRL BK 28V
071-01284-0005	ADF CTRL BK 5V
071-01284-0006	ADF CNTR GY 28V
071-01284-0007	ADF CTRL GY 5V
071-01284-0008	ADF CTRL BK 5V
071-01284-0009	ADF CTRL BK 28V
071-01284-0010	ADF CTRL BK 14V
071-01284-0011	ADF CNTR GY 5V
071-01284-0012	ADF CNTR BK 28V
071-01284-0013	ADF CTRL GY 28V
071-01284-0014	ADF CNTR BK 28V
071-01284-0015	ADF CNTR BK 5V
071-01284-0016	ADF CNTR GY 28V
071-01284-0017	ADF CNTR GY 5V
071-01284-0019	ADF CNTR BK NVG
071-01284-0020	ADF CTRL GY NVG
071-01284-0021	ADF CTRL BK NVG
071-01284-0022	ADF CTRL GY NVG
071-01284-0023	ADF CTRL BK NVG
071-01284-0024	ADF CTRL GY NVG
071-01284-0029	ADF 1LYR BK NVG
071-01291-0012	NAV/TAC CTRL BK 28
071-01291-0015	NAV/TAC CTRL BK 5V
071-01291-0016	NAV/TAC CTRL GY 5V
071-01291-0017	NAV/TAC CTRL BK 28
071-01291-0018	NAV/TAC CTRL GY 28
071-01291-0020	NAV/TAC CTRL BK 5V
071-01291-0022	NAV/TAC CTRL BK 28
071-01291-0023	NAV/TAC CTRL GY 28
071-01291-0025	NAV/TAC CTRL 5K 5V
071-01291-0026	NAV/TAC CTRL GY 5V
071-01291-0027	NAV/TAC CTRL BK 28
071-01291-0028	NAV/TAC CTRL B NVG
071-01291-0029	NAV/TAC CTRL G NVG
071-01291-0030	NAV/TAC CTRL B NVG
071-01291-0031	NAV/TAC CTRL G NVG
071-01291-0032	NAV/TAC CTRL B NVG
071-01291-0033	NAV/TAC CTRL G NVG

PART NUMBER	DESCRIPTION
071-01312-0000	FINAL ASSY GC 361A
071-01312-0001	FINAL ASSY GC 361A
071-01312-0002	FINAL ASSY GC 361A
071-01313-0000	FINAL ASSY
071-01313-0001	FINAL ASSY
071-01313-0002	FINAL ASSY
071-01313-0003	FINAL ASSY
071-01313-0010	FINAL ASSY
071-01313-0011	FINAL ASSY
071-01313-0012	FINAL ASSY
071-01313-0013	FINAL ASSY
071-01313-0020	FINAL ASSY
071-01313-0021	FINAL ASSY
071-01313-0022	FINAL ASSY
071-01313-0023	FINAL ASSY
071-01313-0030	GC360A BLK 14/ 28V
071-01313-0031	GC360A BLK 5V
071-01313-0032	GC360A GRY 14/ 28V
071-01313-0033	GC 360A GRY 5V
071-01315-0000	RADAR ART RS181A
071-01315-0010	RS181 VP TOP BOM
071-01315-0030	RS181A VP/EFIS
071-01318-0000	RADAR RT RS841A
071-01318-0010	RS841A RADAR VP
071-01318-0030	RS841A VP/EFIS R/T
071-01319-0000	RDR RS861A BAE
071-01319-0010	RS861A VP UNIT
071-01319-0020	RDR RS 861A GSM
071-01319-0030	RS861A R/T VP/EFIS
071-01359-0000	GC381A BLK 14/28VF
071-01359-0001	GC381A BLK 5V FA
071-01359-0002	GC381A GRY14/28VFA
071-01359-0003	GC381A GRY 5V FA
071-01359-0010	GC381A BLK 28VIN82
071-01359-0011	GC381A BLK 5V IN82
071-01359-0012	GC381A GRY 28VIN82
071-01359-0013	GC381A GRY 5V IN82
071-01361-0000	KA 670 GPS LNC ANT
071-01361-0010	KA670 GPS LNC ASSY
071-01378-0000	RDS81 RT ANT
071-01438-0101	CP466A RDR BLK
071-01438-0102	CP466A RDR BLK
071-01438-0201	CP466A RDR GRAY
071-01438-0202	CP466A RDR GRAY

PART NUMBER	DESCRIPTION
071-01438-0301	CP466A PROFILE BLK
071-01438-0302	CP466A VP BLK
071-01438-0401	CP466A PROFILE GRY
071-01438-0402	CP466A VP GRAY
071-01438-0501	CP466A LDET BLK
071-01438-0502	CP466A LDET BLK
071-01438-0601	CP466A LDET GRY
071-01438-0602	CP466A LDET GRAY
071-01438-0701	CP466A VP LDET BLK
071-01438-0702	CP466A VP LDET BLK
071-01438-0801	CP466A VP LDET GRY
071-01438-0802	CP466A VP LDET GRA
071-01438-0902	CP466A VP SECT BLK
071-01438-1002	CP466A VP SECT GRY
071-01438-1102	CP466A VP L SC BLK
071-01438-1202	CP466A VP L SC GRY
071-01493-0101	CP466B RDR BLK
071-01493-0102	CP466B RDR BLK
071-01493-0201	CP466B RDR GRAY
071-01493-0202	CP466B RDR GRAY
071-01493-0301	CP466B
071-01493-0302	CP466B VP WHITE
071-01493-0401	CP466B PROFILE GRY
071-01493-0402	CP466B VP GRAY
071-01493-0501	CP466B LDET BLK
071-01493-0502	CP466B LDET BLK
071-01493-0601	CP466B LDET GRY
071-01493-0602	CP466B LDET GRAY
071-01493-0701	CP466B VP LDET BLK
071-01493-0702	CP466B VP LDET BLK
071-01493-0801	CP466B VP LDET GRY
071-01493-0802	CP466B VP LDET GRY
071-01493-0902	CP466B VP SECT BLK
071-01493-1002	CP466B VP SECT GRY
071-01493-1102	CP466B VP L SC BLK
071-01493-1202	CP466B VP LSC GRY
071-01505-0101	FINAL ASSY GC362A
071-01505-0102	FINAL ASSY GC362A
071-01505-0103	FINAL ASSY GC362A
071-01505-0203	FNL ASY GC362 CLNS
071-01519-0101	FINAL ASSY ART2000
071-01539-0101	KFS599A NVG
071-01546-0101	KFS 599A BOM
071-01546-0201	FINAL ASSY KFS599A

PART NUMBER	DESCRIPTION
071-01546-0202	KFS 599A UHF CNTRL HEAD NO G/S
071-01546-0401	FINAL ASSY KFS599A
071-01546-1201	KFS599A FINAL ASY
071-01546-2201	FINAL ASSY KFS599A
071-01550-0101	FINAL ASSY ART2100
071-01550-0201	FINAL ASSY ART 2100
071-01576-0101	KFS 599B FINAL ASSY
071-01576-1201	KFS599B FINAL ASSY
071-01579-0000	HF LIGHTNING ARRESTOR
121754-	FLEX SHAFT
121754-1	SHAFT FLEX
121754-3	SHAFT FLEX
121754-4	SHAFT FLEX
121754-5	SHAFT FLEX
126758-	PNEU DRIVE ACT
126758-1	ACTUATOR PNEUMATIC DRIVE
126758-2	ACTUATOR PNEUMTIC DRIVE
126758-3	ACTUATOR PNEUMTIC DRIVE
126758-4	ACTUATOR PNEUMTIC DRIVE
126758-5	ACTUATOR PNEUMTIC DRIVE
126758-6	ACTUATOR PNEUMTIC DRIVE
126758-7	ACTUATOR PNEUMTIC DRIVE
126758-8	ACTUATOR PNEUMTIC DRIVE
3202278-	VALVE OUTLINE, CHECK
3202278-1-1	VALVE CHECK
3202278-2	VALVE, CHECK
3202278-3	VALVE CHECK
320522-	VALVE OUTLINE, SOLENOID, DIRECTIONAL PILOT
320522-1	DIRECTIONAL PILOT VALVE
320522-10	DIRECTIONAL PILOT VALVE
320522-11	Pilot Valve
320522-12	DIRECTIONAL PILOT VALVE
320522-13	Pilot Valve
320522-14	Pilot Valve
320522-15	VALVE OUTLINE, SOLENOID, DIRECTIONAL PILOT
320522-16	VALVE OUTLINE,SOLENOID
320522-17	VALVE OUTLINE,SOLENOID
320522-18	VALVE OUTLINE,SOLENOID
320522-19	VALVE OUTLINE,SOLENOID
320522-2	DIRECTIONAL PILOT VALVE
320522-3	DIRECTIONAL PILOT VALVE
320522-4	DIRECTIONAL PILOT VALVE
320522-5	Pilot Valve
320522-6	Pilot Valve

PART NUMBER	DESCRIPTION
320522-7	Pilot Valve
320522-8	DIRECTIONAL PILOT VALVE
320522-9	DIRECTIONAL PILOT VALVE
320522-9-1	VALVE OUTLINE, SOLENOID, DIRECTIONAL PILOT
3269086-	CENTER DRIVE UNIT
3269086-11	SUBSYSTEM, ACTUATOR-
3269086-12	SUBSYSTEM, ACTUATOR-
3269086-13	SUBSYSTEM, ACTUATOR-
3269086-14	SUBSYSTEM, ACTUATOR-
3269086-21	SUBSYSTEM, ACTUATOR-
3269086-22	SUBSYSTEM, ACTUATOR-
3269086-23	SUBSYSTEM, ACTUATOR-
3269086-24	SUBSYSTEM, ACTUATOR-
3269086-31	SUBSYSTEM, ACTUATOR-
3269086-35	SUBSYSTEM, ACTUATOR-FEEDBACK
3269086-36	SUBSYSTEM, ACTUATOR-FEEDBACK
3269086-39	SUBSYSTEM, ACTUATOR-FEEDBACK
3269086-40	SUBSYSTEM, ACTUATOR-FEEDBACK
3269086-5	SUBSYSTEM, ACTUATOR-
3269086-6	SUBSYSTEM, ACTUATOR-
3269086-7	SUBSYSTEM, ACTUATOR-
3269086-8	SUBSYSTEM, ACTUATOR-
3269264-	ACTUATOR, LH FEEDBACK
3269264-1	SUBSYSTEM, ACTUATOR
3269264-10	SUBSYSTEM, ACTUATOR
3269264-2	SUBSYSTEM, ACTUATOR
3269264-24	SUBSYSTEM ACTUATOR
3269264-28	SUBSYSTEM ACTUATOR
3269264-3	SUBSYSTEM, ACTUATOR
3269264-35	SUBSYSTEM ACTUATOR-FEEDBACK
3269264-36	SUBSYSTEM ACTUATOR-FEEDBACK
3269264-4	SUBSYSTEM, ACTUATOR
3272570-	BALLSCREW
3272570-1	ACTUATOR BALLSCREW,
3272570-2	ACTUATOR BALLSCREW,
3272570-3	ACTUATOR BALLSCREW,
3272570-4	ACTUATOR BALLSCREW,
3272570-5	ACTUATOR BALLSCREW,
3272570-6	ACTUATOR, BALLSCREW
3272570-7	ACTUATOR OUTLINE, BALLSCREW, THRUST REVERSER
3272570-8	ACTUATOR OUTLINE, BALLSCREW, THRUST REVERSER
3272570-9	ACTUATOR OUTLINE, BALLSCREW, THRUST REVERSER
3272602-	ACTUATOR, BALLSCREW
3272602-1	ACTUATOR, BALLSCREW

PART NUMBER	DESCRIPTION
3272602-2	ACTUATOR, BALLSCREW
3272602-3	ACTUATOR, BALLSCREW
3272602-4	ACTUATOR, BALLSCREW
3272602-5	ACTUATOR, BALLSCREW
7006921-301	WX Controller
7006921-302	WX Controller
7006921-303	WX Controller
7006921-304	WX Controller
7006921-311	WX Controller
7006921-312	WX Controller
7006921-401	WX Controller
7006921-402	WX Controller
7006921-403	WX Controller
7006921-404	WX Controller
7006921-412	WX Controller
7006921-413	WX Controller
7006921-414	WX Controller
7006921-415	WX Controller
7006921-416	WX Controller
7006921-7815	WX Controller
7006921-7825	WX Controller
7006921-7826	WX Controller
7006921-815	WX Controller
7006921-816	WX Controller
7007700-101	INDICATOR,GENERIC RADAR-WI-440
7007700-102	INDICATOR,GENERIC RADAR-WI-440
7007700-103	INDICATOR,GENERIC RADAR-WI-440
7007700-104	INDICATOR,GENERIC RADAR-WI-440
7007700-111	INDICATOR,GENERIC RADAR-WI-440
7007700-112	INDICATOR,GENERIC RADAR-WI-440
7007700-113	INDICATOR,GENERIC RADAR-WI-440
7007700-114	INDICATOR,GENERIC RADAR-WI-440
7007700-301	INDICATOR,GENERIC RADAR-WI-650
7007700-302	INDICATOR,GENERIC RADAR-WI-650
7007700-303	INDICATOR,GENERIC RADAR-WI-650
7007700-304	INDICATOR,GENERIC RADAR-WI-650
7007700-311	INDICATOR,GENERIC RADAR-WI-650
7007700-402	INDICATOR,GENERIC RADAR-WI-880
7007700-403	INDICATOR,GENERIC RADAR-WI-880
7007700-404	INDICATOR,GENERIC RADAR-WI-880
7007700-411	INDICATOR GENERIC RADAR-WI-880
7007700-412	INDICATOR GENERIC RADAR-WI-880
7007700-413	INDICATOR GENERIC RADAR-WI-880

PART NUMBER	DESCRIPTION
7007700-414	INDICATOR,GENERIC RADAR-WI-880
7007700-603	INDICATOR,GENERIC RADAR-WI-660
7007700-604	INDICATOR,GENERIC RADAR-WI-660
7007700-611	INDICATOR,GENERIC RADAR-WI-660
7007700-613	INDICATOR GENERIC RADAR-WI-660
7007700-614	INDICATOR GENERIC RADAR-WI-660
7007700-803	INDICATOR,GENERIC RADAR-WI-870
7007700-804	INDICATOR,GENERIC RADAR-WI-870
7008471-101	RADAR CONTROL PANEL
7008471-102	RADAR CONTROL PANEL
7008471-103	RADAR CONTROL PANEL
7008471-104	RADAR CONTROL PANEL
7008471-111	RADAR CONTROL PANEL
7008471-112	RADAR CONTROL PANEL
7008471-113	RADAR CONTROL PANEL
7008471-114	RADAR CONTROL PANEL
7008471-405	RADAR CONTROL PANEL
7008471-406	RADAR CONTROL PANEL
7008471-407	RADAR CONTROL PANEL
7008471-408	RADAR CONTROL PANEL
7008471-413	RADAR CONTROL PANEL
7008471-415	RADAR CONTROL PANEL
7008471-416	RADAR CONTROL PANEL
7008471-417	RADAR CONTROL PANEL
7008471-418	RADAR CONTROL PANEL
7008471-419	WX Controller
7008471-422	WX Controller
7008471-424	WX Controller
7008471-441	RADAR CONTROL PANEL
7008471-443	RADAR CONTROL PANEL
7008471-444	RADAR CONTROL PANEL
7008471-601	RADAR CONTROL PANEL
7008471-602	RADAR CONTROL PANEL
7008471-603	RADAR CONTROL PANEL
7008471-605	RADAR CONTROL PANEL
7008471-606	RADAR CONTROL PANEL
7008471-643	WX Controller
7008471-644	WX Controller
7008471-665	WX Controller
7008471-666	WX Controller
7008471-667	WX Controller
7008471-668	WX Controller
7008471-669	WX Controller
7008471-676	WX Controller

PART NUMBER	DESCRIPTION
7008471-677	WX Controller
7008471-678	WX Controller
7008471-685	WX Controller
7008471-686	WX Controller
7008471-687	WX Controller
7008471-688	CONTROLLER,WEATHER RADAR WC-660
7008471-690	WX Controller
7008471-801	RADAR CONTROL PANEL
7008471-802	RADAR CONTROL PANEL
7008471-803	RADAR CONTROL PANEL
7008471-804	RADAR CONTROL PANEL
7021450-401	RCVR - TRANSMITTER - ANTENNA ASSEMBLY
7021450-601	RCVR - TRANSMITTER - ANTENNA ASSEMBLY
7021450-801	RCVR - TRANSMITTER - ANTENNA ASSEMBLY