



AUTHORIZED SERVICE CENTERS

MASCO AVIONICS AND ACCESSORIES ONTIC AUTHORIZED MRO CAPABILITIES LIST

To learn more about Masco Avionics and Accessories Ontic Authorized MRO capabilities, get in touch with them on the details below.

E: buddymoore@mascoservice.com

T: 817-481-8205

W: www.mascoservice.com



PART NUMBER	DESCRIPTION
064-01015-0000	XCVR HF/SSB RMT
064-01015-0001	RCVR/EXCTR W/SEL
064-01015-0010	RX/EX W/SP PROC
064-01015-0011	RX/EX W/S P AND SCL
064-01015-0040	RX/EX MOD BW
064-01015-0041	RX/EX MOD BW SCL
064-01015-0051	RX/EX W/WBW DTANDSC
064-01015-0053	RX/EX W/SBW DTANDSC
064-01015-0061	FINAL ASSY
064-01016-0000	HF CONT 28V BLK
064-01016-0001	HF CONT 5V BLK
064-01016-0002	HF CONT 28V GRY
064-01016-0003	HF CONT 5V GRY
064-01016-0004	HF CONT 28V RB
064-01016-0005	HF CONT 115V NVG B
064-01016-0010	HF CTL 28V BK 23M
064-01016-0011	HF CTL 5V BK 23M
064-01016-0012	HF CTL 28V GY 23M
064-01016-0013	HF CTL 5V GY 23M
064-01016-0014	HF CTL 28V RB 23M
064-01017-0000	XCVR RMT AUTO CPLR
064-01017-0001	PWR AMP/ANT CPLR
064-01017-0002	XCVR RMI CPLR
064-01017-0011	FINAL ASSY
064-01017-0012	FINAL ASSY
064-01023-0000	FINAL ASSY 25K SEL
064-01023-0001	FINAL ASSY 50K SEL
064-01023-0002	FINAL ASSY 25K BB
064-01023-0003	FINAL ASSY 50K BB
064-01023-0004	25K SEL W/SELCAL
064-01023-0005	50K SEL W/SELCAL
064-01023-0006	25K BB W/SELCAL
064-01023-0007	50K BB W/SELCAL
064-01023-0008	FINAL ASSY 25K SEL
064-01023-0010	FINAL ASSY 25K JB
064-01065-0100	FINAL KTR909
064-01071-0101	KCU1051 FINAL ASSY
064-01071-0201	FINAL ASSEMBLY KCU1051
064-01071-0301	FINAL ASSEMBLY KCU 1051
066-01044-0000	KMR675 MARKER BEACON RECEIVER
066-01044-0001	KMR675 BCN RCVR W/O TONE TEST
066-01069-0002	KDI 573 SLV W/1H2
066-01069-0003	KDI 573 SLV W/O1H2
066-01069-0004	KDI 574 INDICATOR

PART NUMBER	DESCRIPTION
066-01069-0005	KDI 574 W/O 1H2
066-01069-0014	KDI 574 GRY INDCTR
066-01078-0000	NAV RCVR GS MB RMI
066-01078-0001	NAV RCVR GS RMI
066-01078-0002	NAV RCVR MB RMI
066-01078-0003	NAV RCVR RMI
066-01078-0004	NAV RCVR GS MB
066-01078-0005	NAV RCVR GS
066-01078-0006	NAV RCVR MKR BCN
066-01078-0007	NAV RCVR CONV
066-01078-0008	NAV RECEIVER
066-01078-0010	NAV RCVR GS MB RMI
066-01078-0011	NAV RCVR GS RMI
066-01078-0012	NAV RCVR MB RMI
066-01078-0013	NAV RCVR RMI
066-01078-0014	NAV RCVR GS MB
066-01078-0015	NAV RCVR GS
066-01078-0016	NAV RCVR MKR BCN
066-01078-0017	NAV RCVR
066-01152-0101	KTA 810 FINAL ASSEMBLY
066-01175-0101	KMH 820 WO / GPS
066-01175-0102	KMH 820 W/O GPS
066-01175-2101	KMH 820 W/ GPS
066-01175-2102	KMH 820 W/ GPS
066-01175-2201	KMH 820 W/ GPS
066-01177-0101	KTA 910 FINAL ASSEMBLY
066-01178-0101	KMH 920 WO / GPS
066-01178-0102	KMH 920 W/O GPS
066-01178-2101	KMH 920 W / GPS
066-01178-2102	KMH 920 W/ GPS
066-03060-0000	RADIO MAGNETIC IND
066-03060-0001	RADIO MAGNETIC IND
066-03060-0002	RADIO MAGNETIC IND
066-03060-0003	RADIO MAGNETIC IND
066-03060-0004	KNI 582 TACAN RMI
066-03060-0005	RADIO MAGNETIC IND
066-03060-0006	KNI582 28VB NVG
066-04034-0101	KLN900 GPS LNAV BK
066-04034-0102	KLN900 GPS LNAV BK
066-04034-0104	KLN 900 GPS PMO BK
066-04034-0201	KLN900 GPS LNAV GY
066-04034-0202	KLN900 GPS LNAV GY
066-04034-0204	KLN 900 GPS PMO GR
071-00019-0000	BRIDGING AMPLIFIER

PART NUMBER	DESCRIPTION
071-01268-0001	HF BUS ADPTR EXLSB
071-01270-0000	DUAL EXT CAPACITOR
071-01270-0001	DUAL EXT CAPACITOR
071-01270-0002	DUAL EXT CAPACITOR
071-01274-0000	GC HF CONTROL HEAD
071-01274-0001	GC HF CONTROL HEAD
071-01274-0002	GC HF CONTROL HEAD
071-01274-0003	GC HF CONTROL HEAD
071-01274-0004	GC HF CONTROL HEAD
071-01438-0101	CP466A RDR BLK
071-01438-0102	CP466A RDR BLK
071-01438-0201	CP466A RDR GRAY
071-01438-0202	CP466A RDR GRAY
071-01438-0301	CP466A PROFILE BLK
071-01438-0302	CP466A VP BLK
071-01438-0401	CP466A PROFILE GRY
071-01438-0402	CP466A VP GRAY
071-01438-0502	CP466A LDET BLK
071-01438-0702	CP466A VP LDET BLK
071-01519-0101	FINAL ASSY ART2000
071-01546-0201	FINAL ASSY KFS599A
071-01546-0202	KFS 599A UHF CNTRL HEAD NO G/S
071-01546-0401	FINAL ASSY KFS599A
071-01546-1201	KFS599A FINAL ASY
071-01546-2201	FINAL ASSY KFS599A
071-01550-0101	FINAL ASSY ART2100
071-01550-0201	FINAL ASSY ART 2100
071-01576-1201	KFS599B FINAL ASSY
7007700-101	INDICATOR,GENERIC RADAR-WI-440
7007700-102	INDICATOR,GENERIC RADAR-WI-440
7007700-103	INDICATOR,GENERIC RADAR-WI-440
7007700-104	INDICATOR,GENERIC RADAR-WI-440
7007700-111	INDICATOR,GENERIC RADAR-WI-440
7007700-112	INDICATOR,GENERIC RADAR-WI-440
7007700-113	INDICATOR,GENERIC RADAR-WI-440
7007700-114	INDICATOR,GENERIC RADAR-WI-440
7007700-301	INDICATOR,GENERIC RADAR-WI-650
7007700-302	INDICATOR,GENERIC RADAR-WI-650
7007700-303	INDICATOR,GENERIC RADAR-WI-650
7007700-304	INDICATOR,GENERIC RADAR-WI-650
7007700-311	INDICATOR,GENERIC RADAR-WI-650
7007700-401	INDICATOR,GENERIC RADAR-WI-880
7007700-402	INDICATOR,GENERIC RADAR-WI-880
7007700-403	INDICATOR,GENERIC RADAR-WI-880

PART NUMBER	DESCRIPTION
7007700-404	INDICATOR,GENERIC RADAR-WI-880
7007700-411	INDICATOR GENERIC RADAR-WI-880
7007700-412	INDICATOR GENERIC RADAR-WI-880
7007700-413	INDICATOR GENERIC RADAR-WI-880
7007700-414	INDICATOR,GENERIC RADAR-WI-880
7007700-601	INDICATOR,GENERIC RADAR-WI-660
7007700-602	INDICATOR,GENERIC RADAR-WI-660
7007700-603	INDICATOR,GENERIC RADAR-WI-660
7007700-604	INDICATOR,GENERIC RADAR-WI-660
7007700-611	INDICATOR,GENERIC RADAR-WI-660
7007700-613	INDICATOR GENERIC RADAR-WI-660
7007700-614	INDICATOR GENERIC RADAR-WI-660
7007700-803	INDICATOR,GENERIC RADAR-WI-870
7007700-804	INDICATOR,GENERIC RADAR-WI-870
7008471-101	RADAR CONTROL PANEL
7008471-102	RADAR CONTROL PANEL
7008471-103	RADAR CONTROL PANEL
7008471-104	RADAR CONTROL PANEL
7008471-111	RADAR CONTROL PANEL
7008471-112	RADAR CONTROL PANEL
7008471-113	RADAR CONTROL PANEL
7008471-114	RADAR CONTROL PANEL
7008471-405	RADAR CONTROL PANEL
7008471-406	RADAR CONTROL PANEL
7008471-407	RADAR CONTROL PANEL
7008471-408	RADAR CONTROL PANEL
7008471-413	RADAR CONTROL PANEL
7008471-415	RADAR CONTROL PANEL
7008471-416	RADAR CONTROL PANEL
7008471-417	RADAR CONTROL PANEL
7008471-418	RADAR CONTROL PANEL
7008471-441	RADAR CONTROL PANEL
7008471-443	RADAR CONTROL PANEL
7008471-444	RADAR CONTROL PANEL
7008471-601	RADAR CONTROL PANEL
7008471-602	RADAR CONTROL PANEL
7008471-603	RADAR CONTROL PANEL
7008471-605	RADAR CONTROL PANEL
7008471-606	RADAR CONTROL PANEL
7008471-643	WX Controller
7008471-644	WX Controller
7008471-666	WX Controller
7008471-667	WX Controller
7008471-668	WX Controller

PART NUMBER	DESCRIPTION
7008471-676	WX Controller
7008471-677	WX Controller
7008471-678	WX Controller
7008471-801	RADAR CONTROL PANEL
7008471-802	RADAR CONTROL PANEL
7008471-803	RADAR CONTROL PANEL
7008471-804	RADAR CONTROL PANEL
7021450-401	RCVR - TRANSMITTER - ANTENNA ASSEMBLY
7021450-601	RCVR - TRANSMITTER - ANTENNA ASSEMBLY
7021450-801	RCVR - TRANSMITTER - ANTENNA ASSEMBLY